


Instruction for Remote system



Article no.: 905 + 906

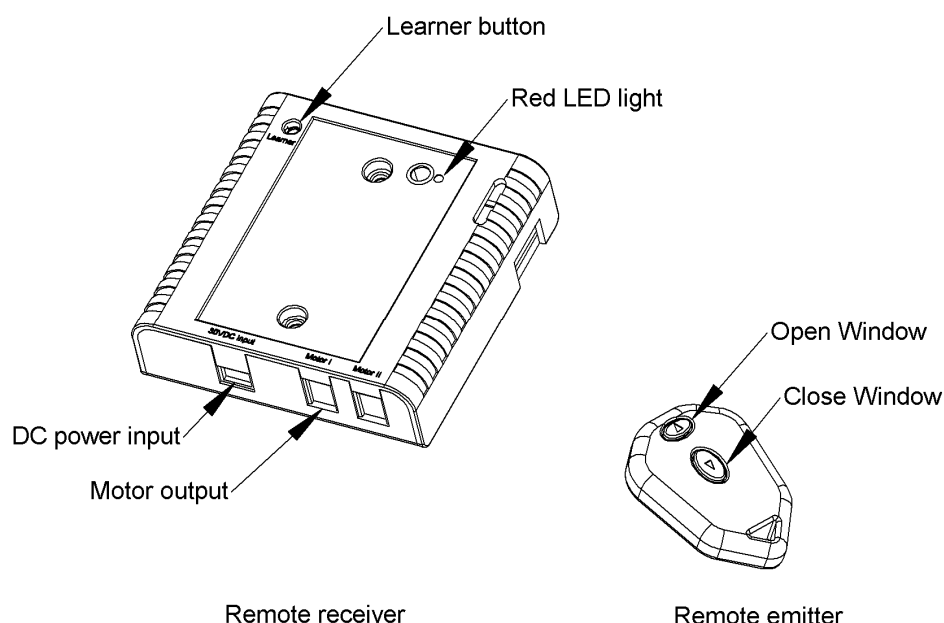

Installation

- connect the power supply and the motor unit to the remote receiver. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lightning
- push the emitter buttons and the motor unit will open and close
- for stopping the motion one of the buttons need to be pushed

Learning


- if the remote receiver do not respond when pushing the emitter buttons, reset the receiver and follow the instruction below
- push the learner button on the receiver for less than 1 sec.
- push one of the emitter buttons
- the red LED light will start flashing
- push one of the emitter buttons again and the red light will turn off
- the units now are coded together with a unique code

Reset

- push and hold down the learner button on the receiver for 10 sec. (will be reset when the red light turns off).

Trouble shooting

- check the plug connections
- check whether the blue light is on
- reset the receiver and make a new coding

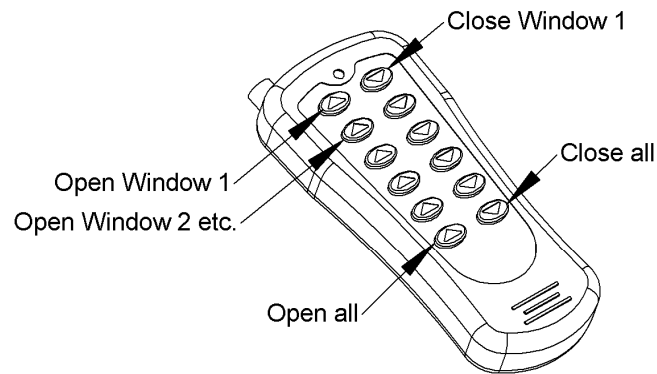

5 channel remote emitter

Installation

- connect the power supply's and the motor unit's to the remote receiver's. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lightning

Learning

- choose the receiver, which need to be activated by first row of buttons (Window 1).
- push the learner button on the receiver for less than 1 sec.
- push button "Open Window 1"
- the red LED light will start flashing
- push any button and the red light will turn off
- the units now are coded together with a unique code
- do the same for Receiver 2, 3 etc.

Reset

- push and hold down the learner button on the receiver for 10 sec.
(will be reset when the red light turns off.)

Trouble shooting

- check the plug connections
- check whether the blue light is on
- reset the receiver and make a new coding