


Instruction for Remote system with auto-close

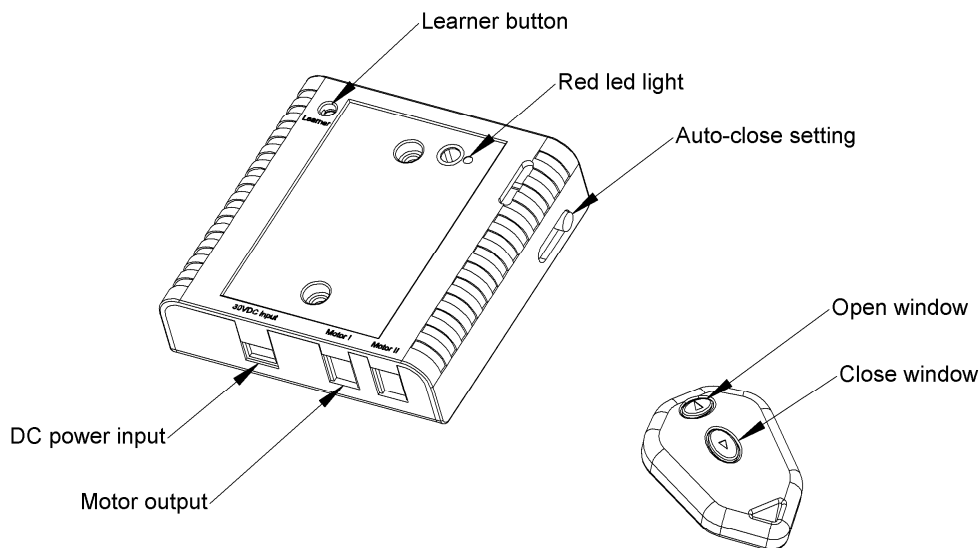

Article no.: 907 + 906



Installation

Remote receiver

Remote emitter

- connect the power supply and the motor unit to the remote receiver. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lightning
- push the emitter buttons and the motor unit will open and close
- for stopping the motion one of the buttons need to be pushed

Learning

- if the remote receiver do not respond when pushing the emitter buttons, reset the receiver and follow the instruction below
- push the learner button on the receiver for less than 1 sec.
- push one of the emitter buttons
- the red LED light will start flashing
- push one of the emitter buttons again and the red light will turn off
- the units now are coded together with a unique code

DIP switch setting (auto close function)


- A = no auto close (opposite shown position).
- B = the operator will close the window after 5 minutes.
- C = the operator will close the window after 15 minutes.
- D = the operator will close the window after 60 minutes (opposite shown).

Reset

push and hold down the learner button on the receiver for 10 sec. (will be reset when the red light turns off).

Trouble shooting

- check the plug connections
- check whether the blue light is on
- reset the receiver and make a new coding

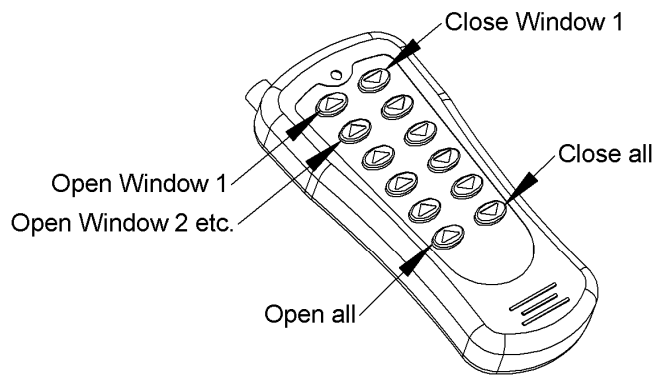

5 channel remote emitter

Installation

- connect the power supply's and the motor unit's to the remote receiver's. 2 different plug sizes make this connection only possible to make in the right way
- after having connected the plugs, the blue light will be lightning

Learning

- choose the receiver, which need to be activated by first row of buttons (Window 1).
- push the learner button on the receiver for less than 1 sec.
- push button "Open Window 1"
- the red LED light will start flashing
- push any button and the red light will turn off
- the units now are coded together with a unique code
- do the same for Receiver 2, 3 etc.

Reset

- push and hold down the learner button on the receiver for 10 sec. (will be reset when the red light turns off).

Trouble shooting

- check the plug connections
- check whether the blue light is on
- reset the receiver and make a new coding